


# RADIM REMOTE 5 ZONES

220-240VAC 50/60Hz IP20

## INTRODUCTION

**IMPORTANT:** Read all the instructions prior to installation

Click to turn ON all zones, press and hold down to increase light intensity of all zones.

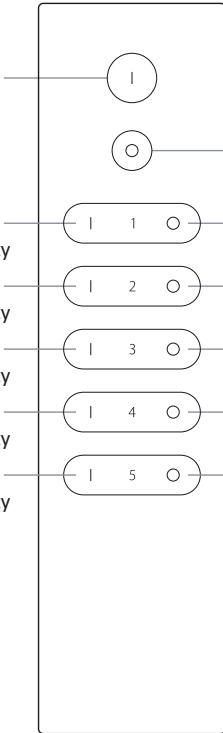

Click to turn OFF all zones, press and hold down to decrease light intensity of all zones.

Zone 1: Click to turn ON, press and hold down to increase light intensity

Zone 2: Click to turn ON, press and hold down to increase light intensity

Zone 3: Click to turn ON, press and hold down to increase light intensity

Zone 4: Click to turn ON, press and hold down to increase light intensity

Zone 5: Click to turn ON, press and hold down to increase light intensity

Zone 1: Click to turn OFF, press and hold down to decrease light intensity

Zone 2: Click to turn OFF, press and hold down to decrease light intensity

Zone 3: Click to turn OFF, press and hold down to decrease light intensity

Zone 4: Click to turn OFF, press and hold down to decrease light intensity

Zone 5: Click to turn OFF, press and hold down to decrease light intensity


Before the first use, please open the battery cover and remove the protective film.



## PRODUCT DATA

Output	RF signal
Operation Frequency	869.5/916.5/434MHz
Power supply	3V(1xCR2025 battery)
Operating temperature	0-40°C
Relative humidity	8% to 80%
Size: (L x B x H)	150 x 38.6 x 12 mm

- Control 5 zones of receivers separately
- Single colour controller
- Compatible with all universal series RF receivers
- 1 receiver can be paired by max 8 different remote controls.
- Protection class: IP20

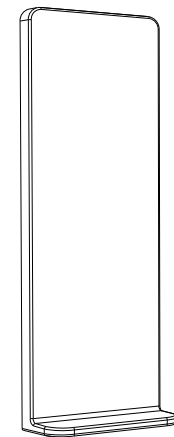

With magnetic Bracket

## SAFETY AND WARNINGS

- This device contains a button lithium battery that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

## INSTALLATION

Do wiring according to the connection diagram.


### Pair with RF receivers:

1. Turn on RF remote
2. Click the "Learning" key button on RF receiver.
2. Click any button on the remote.


The connected led light on receiver will flicker once, meaning well paired.

### If you use multiple receivers, you have two choices:

Option 1: Have all the receivers in the same zone, like zone 1

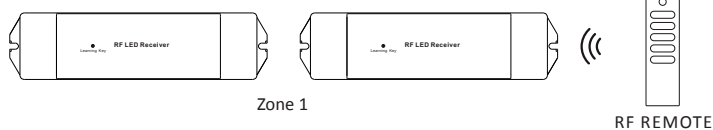

Option 2: Have each receiver in a different zone, like zone 1, 2, 3 or 4

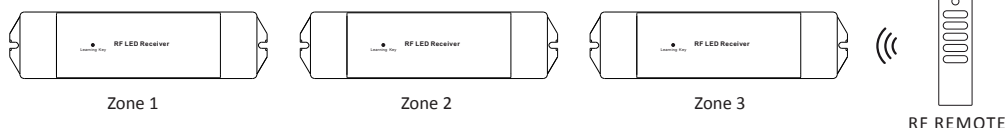

### How to delete the pairing:

Press and hold down "Learning" key on the receiver for 4 seconds until connected LED lights flicker twice, indicating it is deleted.