

64 311 13 Eco Beha Receiver

N Trådløs styre plugg for BEHA ovner
GB Wireless control plug for BEHA heaters



Norsk

Bruker- og installasjons veiledning

Pakkens innhold

1 stk Trådløs Plug-in styremodul for BEHA ovner

Beskrivelse

Eco Beha Receiver er en trådløs styre modul beregnet for fjernstyring eller sentralstyring av Beha miljøovner av typen P og L, produsert etter 2005. Ovnene kan med Beha Eco Receiver brukes sammen med våre sentraler med innebygd radio.

Eco Beha Receiver kan veksle mellom:

Comfort - normaltemperatur som stilles inn på ovnens justeringsratt

Eco - spareprogram som senker temperaturen med ca 4-5°C

Frost - sparefunksjon som holder temperaturen rundt 5°C

Kompatibel med


- 64 311 00 GSM Eco Comfort
- 64 311 14 GSM Eco Controller

Radio rekkevidde

Produktet har en radio rekkevidde på opp mot 100 m i fri sikt. Tykke vegger og etasjeskillere av tre og betong vil redusere rekkevidden. Effektiv rekkevidde i et hus vil normalt være ca 20 meter. Plasser sentralen mest mulig sentralt for best dekning.

Tilkobling til ovn

1. Slå av ovnen. Trekk ut støpselet til ovnen. Ta av barnesikringslokk og pluggdeksel på ovnens bakside.

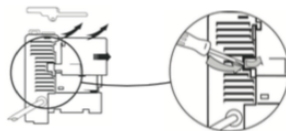

2. Sett pluggen inn, slik at den treffer sporene i plugglommen.
3. Skyv så pluggen på plass. Pass på at kontakt pinnene treffer hullene inn til elektronikken i ovnen.



4. Du hører et lite klikk når pluggen er riktig montert.
5. Nå kan du sette i støpselet og slå på ovnen.

Innmelding i sentral

For å bruke Eco Beha Receiver må den meldes inn i en av våre sentraler med innebygd radio.

1. Aktiver innmeldingsmodus på sentralen. Se sentral enhetens manual for beskrivelse av hvordan dette gjøres.
2. Trykk inn innmeldingsknappen oppe på Eco Beha receiver og hold den inne helt til lampene begynner å blinke. Ca 5 sekunder, slipp deretter knappen.
3. Sentralenheten vil kvittere med funn av tilleggsutstyr.

Lokal betjening

Trykkknappen på Eco Beha Receiver brukes til å bytte mellom Comfort, Eco og Frost. NB: Trykkknapp vil bare bytte mellom Comfort/Eco eller Comfort/Frost avhengig av hvilken modus som er aktivert i minhytte eller Sikom Living appen.

Teknisk informasjon:

Produsent:.....Sikom AS, Norway
Artikkel nummer:.....64 311 13
Artikkel navn:.....Eco Beha Receiver
Driftstemperatur:.....-20°C to +50°C
Strømforsyning:.....230 VAC
Radio frekvens:.....433.9 Mhz
Godkjenning:.....CE
Sikom AS erklærer herved at produktet med tilbehør er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF. Samsvarserklæring ligger tilgjengelig på www.sikom.no

Kontakt informasjon

Sikom AS
Neptunveien 6
N-7652 Verdal
Norway

Phone: +47 740 85 960
E-mail: post@sikom.no
Web: www.sikom.no

64 311 13 Eco Beha Receiver

N Trådløs styre plugg for BEHA ovner
GB Wireless control plug for BEHA heaters



English

User and Installation Guide

Content

1 pc Wireless control plug for BEHA heaters

Description

Eco Beha Receiver is a wireless control plug designed for remote or central control of Beha heaters category P and L, produced after 2005. With Eco Beha Receiver the heaters can be remote or central controlled with our central units with built-in radio.

Eco Beha Receiver can switch between:

Comfort -normal temperature which is set with the adjustment wheel on the oven.

Eco -saving function that lowers the temperature with 4-5°C

Frost -saving function that holds the temperature around 5°C

Compatible with


- 64 311 00 GSM Eco Comfort
- 64 311 14 GSM Eco Controller

Radio range

The products radio range is up to 100 meters in clear view. Thick walls and floors of wood and concrete will decrease the range. Effective range in a house will normally be about 20 meters. It is important to place the central unit in center of the installation for best radio coverage.

Connecting to the heater

1. Turn off the heater and disconnect the heater from the socket. Dismantle the child safety lid and the plug cover on the heaters back side.

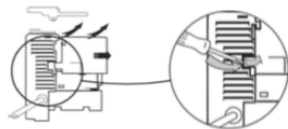

2. Place the plug so it corresponds with the rails and sliders.
3. Push the plug in place. Make sure that the contact pins hit the corresponding holes into the ovens internal electronics.



4. You should hear a "click" when the plug is slides into place.
5. You can now connect the heater to the socket and turn it on.

Enrollment in central unit

To use the Eco Beha Receiver it must be enrolled into one of our central units with inbuilt radio.

1. Activate the enrolment mode on the central unit. Se the user guide of the central unit for how this is done.
2. Press the pushbutton on the Eco Beha Receiver and hold until the lights start blinking. Approximately 5 sec. Release the push button.
3. The central unit and the Sikom Living app will respond with the finding of new accessory.

Local control

The pushbutton on Eco Beha Receiver is used to switch between Comfort, Eco or Frost.. NB: The pushbutton will only switch between Comfort/Eco or Comfort/Frost depending on witch mode that is activated in the Sikom Living app.

Technical specifications:

Manufacturer:.....Sikom AS, Norway
Article number.....64 311 13
Article name.....Eco Beha Receiver
Operating temperature:.....-20°C to +50°C
Power supply:.....230 VAC
Radio frequency:.....433.9 Mhz
Approval:.....CE
Sikom AS herby declares that the product is in compliance with the basic demands and other specific demands according to directive 1999/5/EF. Declaration of conformity is available at www.sikom.no

Contact information

Sikom AS
Neptunveien 6
N-7652 Verdal
Norway

Phone: +47 740 85 960
E-mail: post@sikom.no
Web: www.sikom.no